

Stainless Steel Accessories

DROP KIT – PASSENGER DPF COVER 2018+ 389 LH/SH

INSTALLATION INSTRUCTIONS

1. Remove the Passenger DPF cover by unscrewing bolts from the steps.
2. Remove the OEM bracket from the DPF frame. See Figure 1.

FIGURE 1.



3. From the DPF cover, remove the bottom step brackets. See Figure 2.

FIGURE 2.



Stainless Steel Accessories

- Once the brackets are removed, install new bottom brackets with 1/4-20 x 0.75" carriage bolts provided. See figure 3.

FIGURE 3.




- Before placing the DPF cover back on, install the conversion panel PNL10655000PN on the DPF frame with 3/8-16 nuts provided. See figure 4.

FIGURE 4.



- Place the nylon spacers on the located area in figure 5.

FIGURE 5.

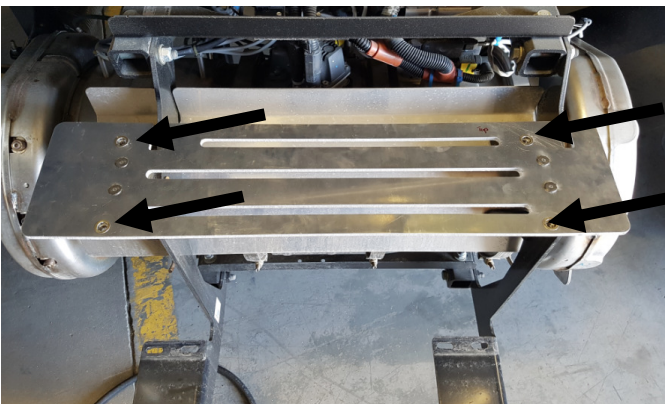

Stainless Steel Accessories

7. Gently place the DPF cover over the frame and install with 3/8-16x1.00" hex bolts provided
8. Attach bottom step with existing bolts from the truck.

